


Instructions for flush mounting of MOStroN TSPC

Installation into a drywall

Required Material

- In-wall mounting frame: consisting of subframe and plaster frame
- TSPC
- Supplied screws
- 2mm Inbus-screwdriver
- PK-glue or similar
- Spirit Level
- Plaster material (recommended: plaster with synthetic contents, e.g. Knauff Uniflott® or similar)
- vacuum suction glass lifters (for handling large displays)

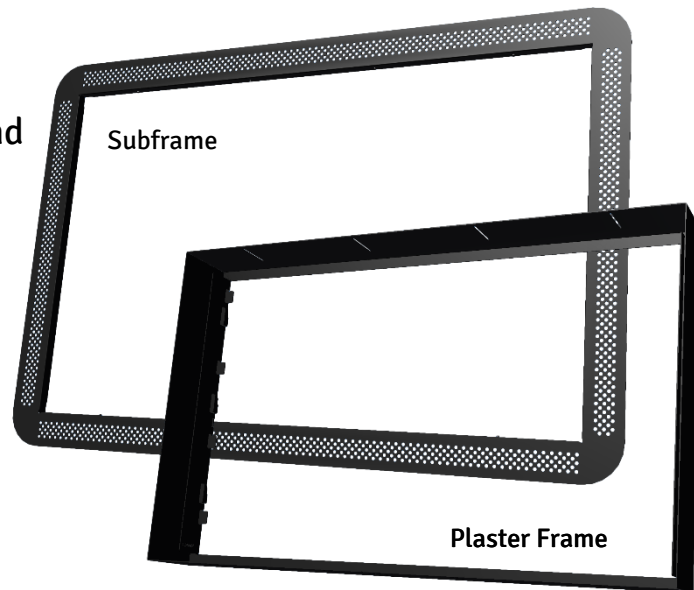


Instructions for flush mounting of MOStroN TSPC

Installation into a drywall

1 Installation of subframe and plaster frame:

Create an installation opening in the drywall, using the subframe. Place the middle of the subframe at an approximate height of 160 cm (measured from the ground). To avoid the display from sitting crooked, check the straight alignment of the opening with the spirit level.

230 V-connection and **network cable** must be available in the opening.

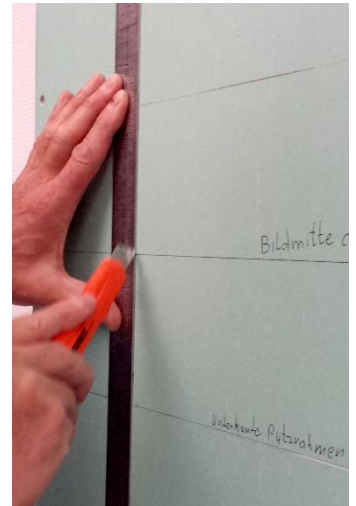


Instructions for flush mounting of MOStrom TSPC

Installation into a drywall

2 Inserting the Subframe:

Insert the plaster frame into the subframe so that it protrudes circumferentially by approx. 5 mm. (1)

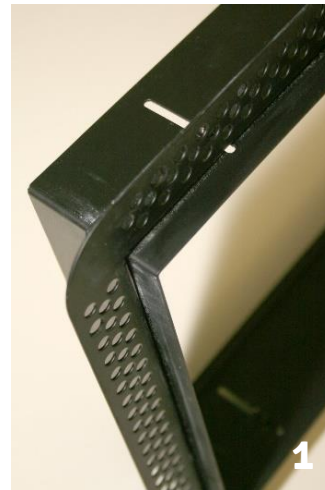

Apply glue to the subframe (perforated frame) – **be careful to apply the glue to the perforated frame only. It must not come into contact with the plaster frame.** (2)





Then insert the frame:

Insert the subframe with the plaster frame into the opening (turn it so that the narrow side of the frame is introduced into the wide side of the opening) (3).



Turn the subframe with the plaster frame inside the opening in the drywall (4). Be careful not to drop it!

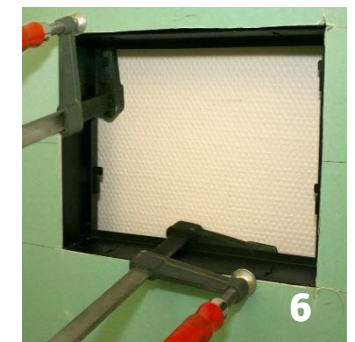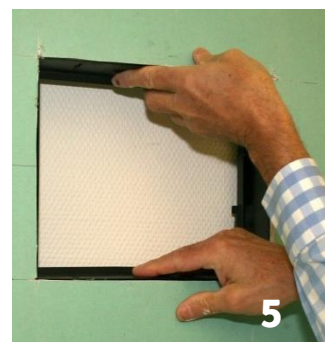

Pull the subframe with the plaster frame forward and glue it to the plasterboard wall (5).

Fix it with screw clamps and let the glue dry properly (6)

Instructions for flush mounting of MOStroN TSPC

Installation into a drywall

3 Flush mount the plaster frame and insert the display:

Loosen all screws in the plaster frame.

Align the plaster frame flush with the plasterboard wall and tighten the screws.

Fill the gap between the plaster frame and the plasterboard wall with fine putty and finish the work on the wall (wall paper, paint etc.)

Finally insert the display into the frame and lock it. Please contact us in case you have any questions.

The displays from 10,4“ to and including 32“ are inserted into the upper side of the frame and then pushed downwards on the guide rails until they lock. The displays from 42” are inserted from the side and locked horizontally.

Done!

