

Mounting Instructions

Customer Terminal


Installation Situation:

Flush-Mounted
plain integration into
wall/furniture/chassis



Important Installation Instructions


- Ensure that there is enough air exchange in the cabinet
- Ensure that there is at least 250mm space between frontplate and backplate of the furniture
- Ensure that the distance from floor to lower edge of terminal display (not from scanner) is 1250mm +/- 10mm
- Ensure that the Orientation is portrait
- Material of cabinet/plate to mount in:
 - **Wood only**
 - **Others: please contact us**

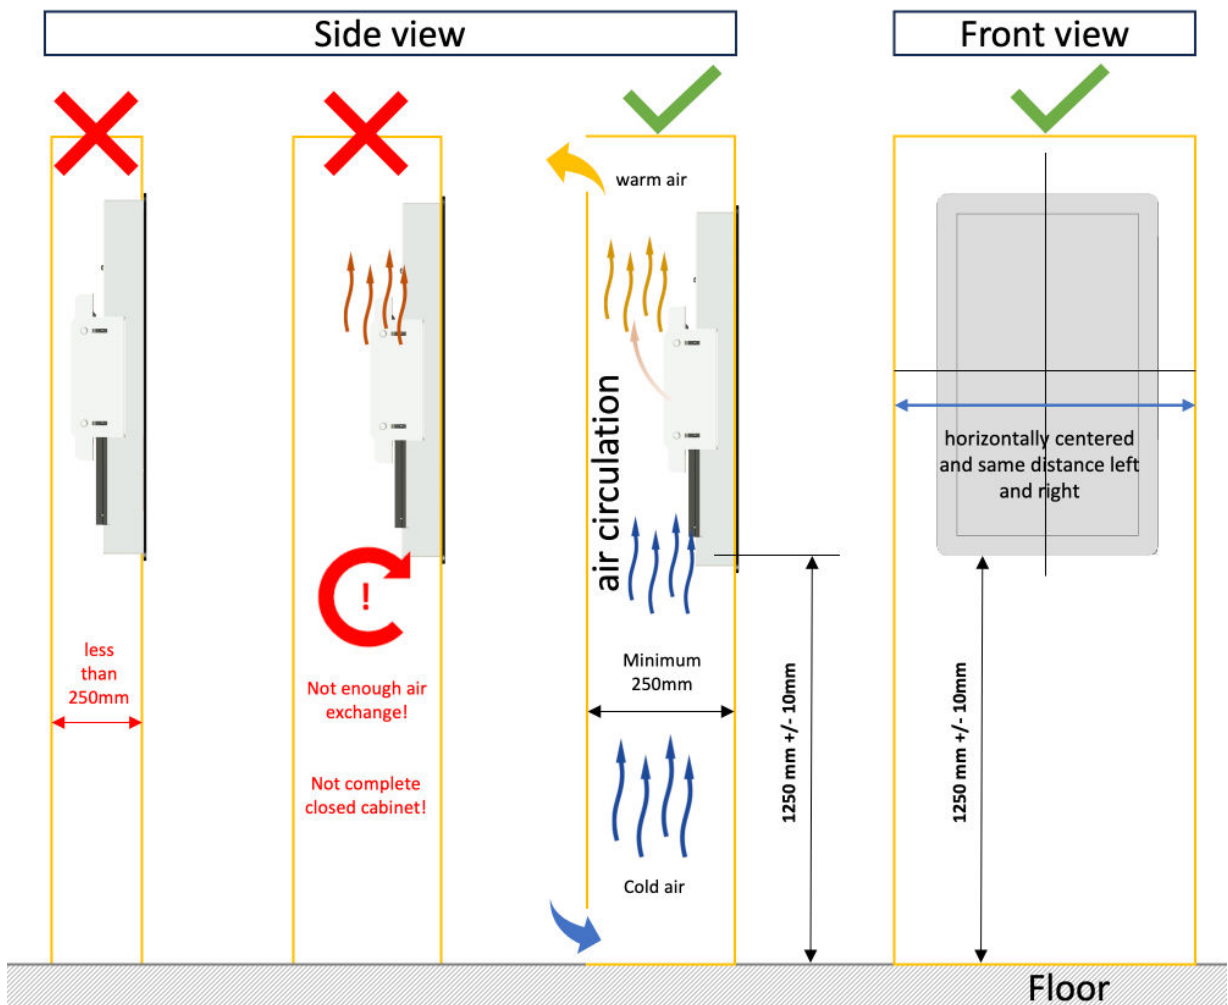

Preparation, aids and necessary tools

First make a suitable cut-out in the wall

Tools must be selected according to the materials to be processed

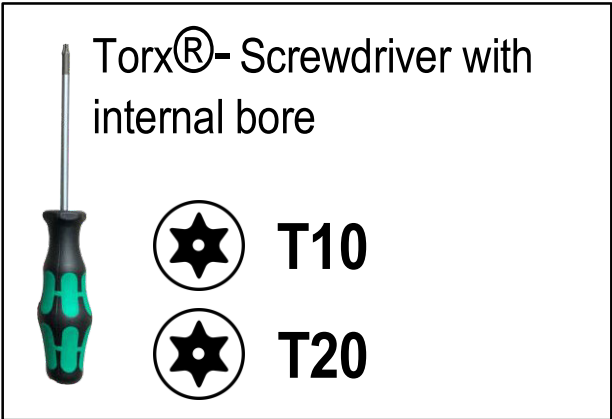

Drilling Template

1:1 scale template is included for accurate installation and can be used as an aid.

Only cut out the blue area if you have a device without a scanner (Fig. 2)

If you have a device with a scanner (Fig. 3), also cut out the green area

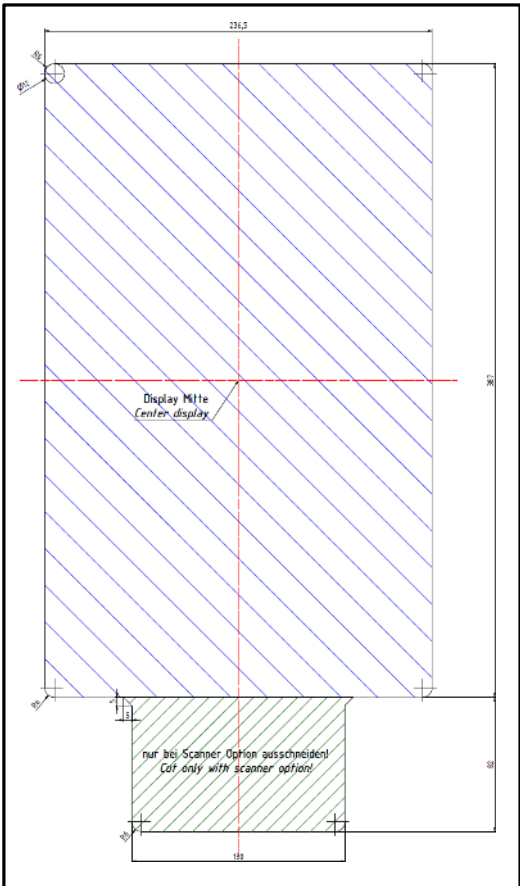


Figure 1: LIT15,6-UPS-1.0A



Figure 2: Customer Terminal w/o scanner



Figure 3: Customer Terminal with scanner

Positioning and attachment of the terminal

- (1) Push the device with the pre-assembled mounting plate into the cut-out (Fig. 4)
- (2) Secure the device to prevent from falling out (a second person may be required)
- (3) Fit the mounting brackets on the inside using the washers and screws supplied (washer 4.3 DIN 125, form A) (flat-head screw M4X8mm, DIN 7380, Torx with safety drive) (Fig. 5)
- (4) Now fasten the mounting brackets to the wall

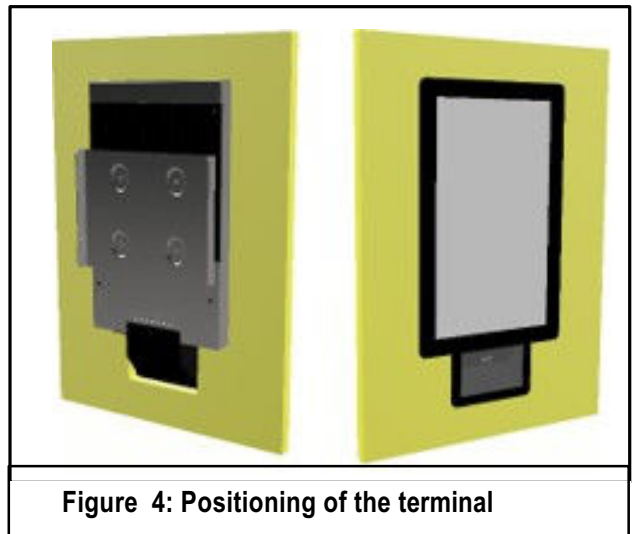


Figure 4: Positioning of the terminal

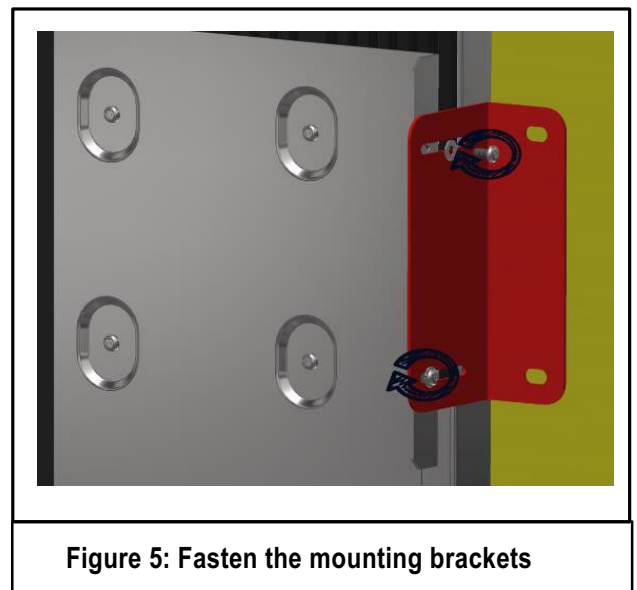


Figure 5: Fasten the mounting brackets

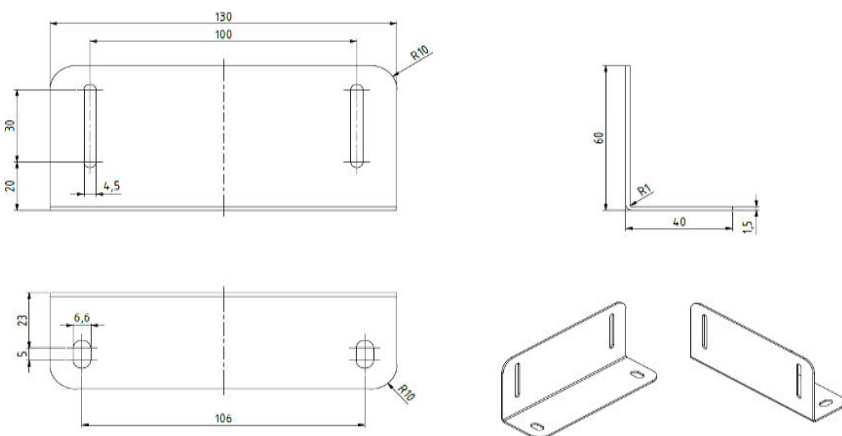


Figure 6: Drawing Mounting Brackets

*The fixing screws depend on the material and thickness of the wall and are not included in the scope of delivery. The selected screw should not exceed a diameter of 6 mm.